


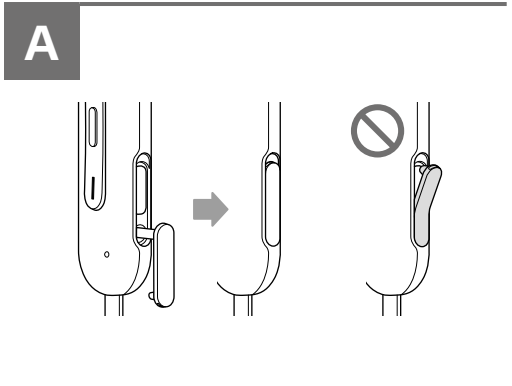

This product (including accessories) has magnets, which may interfere with pacemakers, programmable shunt valves for hydrocephalus treatment, or other medical devices. Do not place this product close to persons who use such medical devices, consult your doctor before using this product if you use any such medical device.

There is a danger that small parts may be swallowed. After use, store in a location out of reach of small children.

Note about static electricity

If you use the unit when the air is dry, you may experience discomfort due to static electricity accumulated on your body. This is not a malfunction of the unit. You can reduce the static by wearing clothes made of natural materials that do not easily generate static electricity.

Precautions

The two-dimensional code or the URL on the cover will help you access the help guide that describes useful notes or procedures in details.

On water resistant of the unit

- Unless the unit is used correctly, water may get into the unit and cause fuse, electrocution, or malfunctions.
- Note the following cautions carefully and use the unit correctly.
- Make sure that the USB Type-C® port cover is closed securely when you use the unit.

To maintain water resistant performance

Carefully note the precautions below to ensure proper use of the unit.

- Make sure the USB Type-C port cover is closed securely when using the unit. If there is any foreign material on the cover or it is not completely closed, the water resistant performance cannot be maintained. Water may get inside and cause the unit to malfunction.
- Do not splash water forcibly into the sound output holes.
- Do not drop the unit into water, and do not use underwater.
- Do not allow the unit to remain wet in a cold environment, as the water may freeze. To prevent malfunction, make sure to wipe off any water from the unit.
- Do not place the unit in water or use it in a humid place such as a bathroom.
- Do not drop the unit into water, or subject to mechanical shock. Doing so may deform or damage the unit, resulting in deterioration of water resistance performance.

Notice for customers: the following information only applies to products sold in countries applying EU directives and/or UK applying relevant statutory requirements.

This product has been manufactured by or on behalf of Sony Corporation, UK Importer: Sony Europe B.V. Inquiries to the EU Importer or related to product compliance in Europe should be made to the manufacturer's authorized representative, Sony Belgium, bijkantoor van Sony Europe B.V., Da Vincielaan 7-D1, 1930 Zaventem, Belgium.

Herbey, Sony Corporation declares that this equipment is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: <https://compliance.sony.eu>

Disposal of waste batteries and electrical and electronic equipment (applicable in the European Union and other countries with separate collection systems)

This symbol on the product, the battery or on the packaging indicates that the product and the battery shall not be treated as household waste. On certain batteries this symbol might be used in combination with a chemical symbol. The chemical symbol for lead (Pb) is added if the battery contains more than 0.004% lead. By ensuring that these products and batteries are disposed correctly, you will help to prevent any potentially negative consequences for the environment and human health which could be caused by inappropriate waste handling. The recycling of the materials will help to conserve natural resources. In case of products that for safety, performance or data integrity reasons, require a permanent connection with an incorporated battery, this battery should be replaced by qualified service staff only. To ensure that the battery and the electrical and electronic equipment will be treated properly, hand over these products at end-of-life to the appropriate collection point for the recycling of electrical and electronic equipment. For all other batteries, please view the section on how to remove the battery from the product safely. Hand the battery over to the appropriate collection point for the recycling of waste batteries. For more detailed information about recycling of this product or battery, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product or battery.

WI-C100

Model: Y2957

5-036-699-12(1)

* 5 0 3 6 6 9 9 1 2 * (1)

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Compatible iPhone/iPod models

iPhone 12 Pro Max, iPhone 12 Pro, iPhone 12, iPhone 12 mini, iPhone SE (2nd generation), iPhone 11 Pro Max, iPhone 11 Pro, iPhone 11, iPhone XS Max, iPhone XS, iPhone XR, iPhone X, iPhone 8 Plus, iPhone 8, iPhone 7 Plus, iPhone 7, iPhone 6s Plus, iPhone 6s, iPhone 6, iPhone 6 Plus, iPhone 5s, iPod touch (7th generation), iPod touch (6th generation) (As of January 2022)

Trademarks

- Apple, iPhone, iPod and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.
- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and used under license from the proprietor under license.
- USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum.
- All other trademarks and registered trademarks are trademarks or registered trademarks of their respective holders. In this manual, "®" and "™" marks are not specified.

On water resistant of the unit

- Unless the unit is used correctly, water may get into the unit and cause fuse, electrocution, or malfunctions.
- Note the following cautions carefully and use the unit correctly.
- Make sure that the USB Type-C® port cover is closed securely when you use the unit.

To maintain water resistant performance

Carefully note the precautions below to ensure proper use of the unit.

- Make sure the USB Type-C port cover is closed securely when using the unit. If there is any foreign material on the cover or it is not completely closed, the water resistant performance cannot be maintained. Water may get inside and cause the unit to malfunction.
- Do not splash water forcibly into the sound output holes.
- Do not drop the unit into water, and do not use underwater.
- Do not allow the unit to remain wet in a cold environment, as the water may freeze. To prevent malfunction, make sure to wipe off any water from the unit.
- Do not place the unit in water or use it in a humid place such as a bathroom.
- Do not drop the unit into water, or subject to mechanical shock. Doing so may deform or damage the unit, resulting in deterioration of water resistance performance.

Notice for customers: the following information only applies to products sold in countries applying EU directives and/or UK applying relevant statutory requirements.

This product has been manufactured by or on behalf of Sony Corporation, UK Importer: Sony Europe B.V. Inquiries to the EU Importer or related to product compliance in Europe should be made to the manufacturer's authorized representative, Sony Belgium, bijkantoor van Sony Europe B.V., Da Vincielaan 7-D1, 1930 Zaventem, Belgium.

Herbey, Sony Corporation declares that this equipment is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: <https://compliance.sony.eu>

Disposal of waste batteries and electrical and electronic equipment (applicable in the European Union and other countries with separate collection systems)

This symbol on the product, the battery or on the packaging indicates that the product and the battery shall not be treated as household waste. On certain batteries this symbol might be used in combination with a chemical symbol. The chemical symbol for lead (Pb) is added if the battery contains more than 0.004% lead. By ensuring that these products and batteries are disposed correctly, you will help to prevent any potentially negative consequences for the environment and human health which could be caused by inappropriate waste handling. The recycling of the materials will help to conserve natural resources. In case of products that for safety, performance or data integrity reasons, require a permanent connection with an incorporated battery, this battery should be replaced by qualified service staff only. To ensure that the battery and the electrical and electronic equipment will be treated properly, hand over these products at end-of-life to the appropriate collection point for the recycling of electrical and electronic equipment. For all other batteries, please view the section on how to remove the battery from the product safely. Hand the battery over to the appropriate collection point for the recycling of waste batteries. For more detailed information about recycling of this product or battery, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product or battery.

WI-C100

Model: Y2957

5-036-699-12(1)

* 5 0 3 6 6 9 9 1 2 * (1)

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Compatible iPhone/iPod models

iPhone 12 Pro Max, iPhone 12 Pro, iPhone 12, iPhone 12 mini, iPhone SE (2nd generation), iPhone 11 Pro Max, iPhone 11 Pro, iPhone 11, iPhone XS Max, iPhone XS, iPhone XR, iPhone X, iPhone 8 Plus, iPhone 8, iPhone 7 Plus, iPhone 7, iPhone 6s Plus, iPhone 6s, iPhone 6, iPhone 6 Plus, iPhone 5s, iPod touch (7th generation), iPod touch (6th generation) (As of January 2022)

Trademarks

- Apple, iPhone, iPod and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.
- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and used under license from the proprietor under license.
- USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum.
- All other trademarks and registered trademarks are trademarks or registered trademarks of their respective holders. In this manual, "®" and "™" marks are not specified.

On water resistant of the unit

- Unless the unit is used correctly, water may get into the unit and cause fuse, electrocution, or malfunctions.
- Note the following cautions carefully and use the unit correctly.
- Make sure that the USB Type-C® port cover is closed securely when you use the unit.

To maintain water resistant performance

Carefully note the precautions below to ensure proper use of the unit.

- Make sure the USB Type-C port cover is closed securely when using the unit. If there is any foreign material on the cover or it is not completely closed, the water resistant performance cannot be maintained. Water may get inside and cause the unit to malfunction.
- Do not splash water forcibly into the sound output holes.
- Do not drop the unit into water, and do not use underwater.
- Do not allow the unit to remain wet in a cold environment, as the water may freeze. To prevent malfunction, make sure to wipe off any water from the unit.
- Do not place the unit in water or use it in a humid place such as a bathroom.
- Do not drop the unit into water, or subject to mechanical shock. Doing so may deform or damage the unit, resulting in deterioration of water resistance performance.

Notice for customers: the following information only applies to products sold in countries applying EU directives and/or UK applying relevant statutory requirements.

This product has been manufactured by or on behalf of Sony Corporation, UK Importer: Sony Europe B.V. Inquiries to the EU Importer or related to product compliance in Europe should be made to the manufacturer's authorized representative, Sony Belgium, bijkantoor van Sony Europe B.V., Da Vincielaan 7-D1, 1930 Zaventem, Belgium.

Herbey, Sony Corporation declares that this equipment is in compliance with Directive 2014/53/EU.

The full text of the EU declaration of conformity is available at the following internet address: <https://compliance.sony.eu>

Disposal of waste batteries and electrical and electronic equipment (applicable in the European Union and other countries with separate collection systems)

This symbol on the product, the battery or on the packaging indicates that the product and the battery shall not be treated as household waste. On certain batteries this symbol might be used in combination with a chemical symbol. The chemical symbol for lead (Pb) is added if the battery contains more than 0.004% lead. By ensuring that these products and batteries are disposed correctly, you will help to prevent any potentially negative consequences for the environment and human health which could be caused by inappropriate waste handling. The recycling of the materials will help to conserve natural resources. In case of products that for safety, performance or data integrity reasons, require a permanent connection with an incorporated battery, this battery should be replaced by qualified service staff only. To ensure that the battery and the electrical and electronic equipment will be treated properly, hand over these products at end-of-life to the appropriate collection point for the recycling of electrical and electronic equipment. For all other batteries, please view the section on how to remove the battery from the product safely. Hand the battery over to the appropriate collection point for the recycling of waste batteries. For more detailed information about recycling of this product or battery, please contact your local Civic Office, your household waste disposal service or the shop where you purchased the product or battery.

WI-C100

Model: Y2957

5-036-699-12(1)

* 5 0 3 6 6 9 9 1 2 * (1)

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Reference Guide
Guide de référence
Referenzanleitung
Guida di referenza
Referensvejledning
Referensmaterial
Referentigids

Remarques sur le port du dispositif

- Après utilisation, retirez le casque d'écoute lentement.
- Les embouts d'oreillettes permettent d'établir un pont étanche sur les oreilles, le fait de les presser avec vigueur ou de les retirer rapidement peut entraîner des lésions des tympans.
- Lors du port des embouts d'oreillettes, le diaphragme du haut-parleur peut produire un bruit anormal. Il ne s'agit pas d'un dysfonctionnement.

Autres remarques

- Si vous ressentez une gêne lors de l'utilisation du dispositif, arrêtez de l'utiliser immédiatement.
- Pour obtenir des réponses à toutes questions ou des solutions aux problèmes rencontrés avec le dispositif, qu'il ne soit pas abordés dans ce manuel, veuillez consulter votre revendeur Sony le plus proche.

Spécifications

Casque

Source d'alimentation : 3,7 V C⁺, batterie au lithium rechargeable intégrée

Temps de fonctionnement : 0 °C à 40 °C

Consommation électrique à la puissance nominale : 0,4 W

Émission : Environ 20 g

Masses : Casque stéréo sans fil (1) : 24,400 g (sans fil) (2) : 24,400 g (avec fil) (3) : 24,400 g (avec fil) (4) : 24,400 g (avec fil) (5) : 24,400 g (avec fil) (6) : 24,400 g (avec fil) (7) : 24,400 g (avec fil) (8) : 24,400 g (avec fil) (9) : 24,400 g (avec fil) (10) : 24,400 g (avec fil) (11) : 24,400 g (avec fil) (12) : 24,400 g (avec fil) (13) : 24,400 g (avec fil) (14) : 24,400 g (avec fil) (15) : 24,400 g (avec fil) (16) : 24,400 g (avec fil) (17) : 24,400 g (avec fil) (18) : 24,400 g (avec fil) (19) : 24,400 g (avec fil) (20) : 24,400 g (avec fil) (21) : 24,400 g (avec fil) (22) : 24,400 g (avec fil) (23) : 24,400 g (avec fil) (24) : 24,400 g (avec fil) (25) : 24,400 g (avec fil) (26) : 24,400 g (avec fil) (27) : 24,400 g (avec fil) (28) : 24,400 g (avec fil) (29) : 24,400 g (avec fil) (30) : 24,400 g (avec fil) (31) : 24,400 g (avec fil) (32) : 24,400 g (avec fil) (33) : 24,400 g (avec fil) (34) : 24,400 g (avec fil) (35) : 24,400 g (avec fil) (36) : 24,400 g (avec fil) (37) : 24,400 g (avec fil) (38) : 24,400 g (avec fil) (39) : 24,400 g (avec fil) (40) : 24,400 g (avec fil) (41) : 24,400 g (avec fil) (42) : 24,400 g (avec fil) (43) : 24,400 g (avec fil) (44) : 24,400 g (avec fil) (45) : 24,400 g (avec fil) (46) : 24,400 g (avec fil) (47) : 24,400 g (avec fil) (48) : 24,400 g (avec fil) (49) : 24,400 g (avec fil) (50) : 24,400 g (avec fil) (51) : 24,400 g (avec fil) (52) : 24,400 g (avec fil) (53) : 24,400 g (avec fil) (54) : 24,400 g (avec fil) (55) : 24,400 g (avec fil) (56) : 24,400 g (avec fil) (57) : 24,400 g (avec fil) (58) : 24,400 g (avec fil) (59) : 24,400 g (avec fil) (60) : 24,400 g (avec fil) (61) : 24,400 g (avec fil) (62) : 24,400 g (avec fil) (63) : 24,400 g (avec fil) (64) : 24,400 g (avec fil) (65) : 24,400 g (avec fil) (66) : 24,400 g (avec fil) (67) : 24,400 g (avec fil) (68) : 24,400 g (avec fil) (69) : 24,400 g (avec fil) (70) : 24,400 g (avec fil) (71) : 24,400 g (avec fil) (72) : 24,400 g (avec fil) (73) : 24,400 g (avec fil) (74) : 24,400 g (avec fil) (75) : 24,400 g (avec fil) (76) : 24,400 g (avec fil) (77) : 24,400 g (avec fil) (78) : 24,400 g (avec fil) (79) : 24,400 g (avec fil) (80) : 24,400 g (avec fil) (81) : 24,400 g (avec fil) (82) : 24,400 g (avec fil) (83) : 24,400 g (avec fil) (84) : 24,400 g (avec fil) (85) : 24,400 g (avec fil) (86) : 24,400 g (avec fil) (87) : 24,400 g (avec fil) (88) : 24,400 g (avec fil) (89) : 24,400 g (avec fil) (90) : 24,400 g (avec fil) (91) : 24,400 g (avec fil) (92) : 24,400 g (avec fil) (93) : 24,400 g (avec fil) (94) : 24,400 g (avec fil) (95) : 24,400 g (avec fil) (96) : 24,400 g (avec fil) (97) : 24,400 g (avec fil) (98) : 24,400 g (avec fil) (99) : 24,400 g (avec fil) (100) : 24,400 g (avec fil) (101) : 24,400 g (avec fil) (102) : 24,400 g (avec fil) (103) : 24,400 g (avec fil) (104) : 24,400 g (avec fil) (105) : 24,400 g (avec fil) (106) : 24,400 g (avec fil) (107) : 24,400 g (avec fil) (108) : 24,400 g (avec fil) (109) : 24,400 g (avec fil) (110) : 24,400 g (avec fil) (111) : 24,400 g (avec fil) (112) : 24,400 g (avec fil) (113) : 24,400 g (avec fil) (114) : 24,400 g (avec fil) (115) : 24,400 g (avec fil) (116) : 24,400 g (avec fil) (117) : 24,400 g (avec fil) (118) : 24,400 g (avec fil) (119) : 24,400 g (avec fil) (120) : 24,400 g (avec fil) (121) : 24,400 g (avec fil) (122) : 24,400 g (avec fil) (123) : 24,400 g (avec fil) (124) : 24,400 g (avec fil) (125) : 24,400 g (avec fil) (126) : 24,400 g (avec fil) (127) : 24,400 g (avec fil) (128) : 24,400 g (avec fil) (129) : 24,400 g (avec fil) (130) : 24,400 g (avec fil) (131) : 24,400 g (avec fil) (132) : 24,400 g (avec fil) (133) : 24,400 g (avec fil) (134) : 24,400 g (avec fil) (135) : 24,400 g (avec fil) (136) : 24,400 g (avec fil) (137) : 24,400 g (avec fil) (138) : 24,400 g (avec fil) (139) : 24,400 g (avec fil) (140) : 24,400 g (avec fil) (141) : 24,400 g (avec fil) (142) : 24,400 g (avec fil) (143) : 24,400 g (avec fil) (144) : 24,400 g (avec fil) (145) : 24,400 g (avec fil) (146) : 24,400 g (avec fil) (147) : 24,400 g (avec fil) (148) : 24,400 g (avec fil) (149) : 24,400 g (avec fil) (150) : 24,400 g (avec fil) (151) : 24,400 g (avec fil) (152) : 24,400 g (avec fil) (153) : 24,400 g (avec fil) (154) : 24,400 g (avec fil) (155) : 24,400 g (avec fil) (156) : 24,400 g (avec fil) (157) : 24,400 g (avec fil) (158) : 24,400 g (avec fil) (159) : 24,400 g (avec fil) (160) : 24,400 g (avec fil) (161) : 24,400 g (avec fil) (162) : 24,400 g (avec fil) (163) : 24,400 g (avec fil) (164) : 24,400 g (avec fil) (165) : 24,400 g (avec fil) (166) : 24,400 g (avec fil) (167) : 24,400 g (avec fil) (168) : 24,400 g (avec fil) (169) : 24,400 g (avec fil) (170) : 24,400 g (avec fil) (171) : 24,400 g (avec fil) (172) : 24,400 g (avec fil) (173) : 24,400 g (avec fil) (174) : 24,400 g (avec fil) (175) : 24,400 g (avec fil) (176) : 24,400 g (avec fil) (177) : 24,400 g (avec fil) (178) : 24,400 g (avec fil) (179) : 24,400 g (avec fil) (180) : 24,400 g (avec fil) (181) : 24,400 g (avec fil) (182) : 24,400 g (avec fil) (183) : 24,400 g (avec fil) (184) : 24,400 g (avec fil) (185) : 24,400 g (avec fil) (186) : 24,400 g (avec fil) (187) : 24,400 g (avec fil) (188) : 24,400 g (avec fil) (189) : 24,400 g (avec fil) (190) : 24,400 g (avec fil) (191) : 24,400 g (avec fil) (192) : 24,400 g (avec fil) (193) : 24,400 g (avec fil) (194) : 24,400 g (avec fil) (195) : 24,400 g (avec fil) (196) : 24,400 g (avec fil) (197) : 24,400 g (avec fil) (198) : 24,400 g (avec fil) (199) : 24,400 g (avec fil) (200) : 24,400 g (avec fil) (201) : 24,400 g (avec fil) (202) : 24,400 g (avec fil) (203) : 24,400 g (avec fil) (204) : 24,400 g (avec fil) (205) : 24,400 g (avec fil) (206) : 24,400 g (avec fil) (207) : 24,400 g (avec fil) (208) : 24,400 g (avec fil) (209) : 24,400 g (avec fil) (210) : 24,400 g (avec fil) (211) : 24,400 g (avec fil) (212) : 24,400 g (avec fil) (213) : 24,400 g (avec fil) (214) : 24,400 g (avec fil) (215) : 24,400 g (avec fil) (216) : 24,400 g (avec fil) (217) : 24,400 g (avec fil) (218) : 24,400 g (avec fil) (219) : 24,400 g (avec fil) (220) : 24,400 g (avec fil) (221) : 24,400 g (avec fil) (222) : 24,400 g (avec fil) (223) : 24,400 g (avec fil) (224) : 24,400 g (avec fil) (225) : 24,400 g (avec fil) (226) : 24,400 g (avec fil) (227) : 24,400 g (avec fil) (228) : 24,400 g (avec fil) (229) : 24,400 g (avec fil) (230) : 24,400 g (avec fil) (231) : 24,400 g (avec fil) (232) : 24,400 g (avec fil) (233) : 24,400 g (avec fil) (234) : 24,400 g (avec fil) (235) : 24,400 g (avec fil) (236) : 24,400 g (avec fil) (237) : 24,400 g (avec fil) (238) : 24,400 g (avec fil) (239) : 24,400 g (avec fil) (240) : 24,400 g (avec fil) (241) : 24,400 g (avec fil) (242) : 24,400 g (avec fil) (243) : 24,400 g (avec fil) (244) : 24,400 g (avec fil) (245) : 24,400 g (avec fil) (246) : 24,400 g (avec fil) (247) : 24,400 g (avec fil) (248) : 24,400 g (avec fil) (249) : 24,400 g (avec fil) (250) : 24,400 g (avec fil) (251)

